企警告

原因となります。

運転中は使用しない

下記の注意事項を守らないと

火災・発熱・発火に

ょりやけどゃ大けがの

白転車やバイク、白動車などの運転中

に、ヘッドホンは絶対に使わないでく

ださい。交通事故の原因となります。

周囲の音が聞こえないと危険

歩行中でも音量を上げすぎるとまわり

減するタイプですので、警告音なども

踏み切りや横断歩道、駅のホーム、車

の通る道、工事現場など、周囲の音が

聞こえないと危険な場所では使わない

内部に水や異物を入れない

水や異物が入ると火災や感雷の原因は

なります。万一、水や異物が入ったと

きは、すぐに使用を中止し、お買い上

げ店またはソニーサービス窓口にご相

でください。

このヘッドホンは周囲の音を低

な場所では使用しない

の音が聞こえなくなり危険です。

MDR-NC300D

©2009 Sony Corporation Printed in Malaysia

安全のために

- ソニー製品は安全に充分配慮して設計 されています。しかし、電気製品はす べて、まちがった使いかたをすると 火災や感電などにより人身事故になる ことがあり危険です。事故を防ぐため に次のことを必ずお守りください 接続先の取扱説明書も必ずお読みく
- 安全のために注意事項を守る。
- 故障したら使わない。万一異常が起きたら、ソニーの相談 窓口、またはお買い上げ店に修理を 依頼する。

警告表示の意味

取扱説明書および製品では、次のよ うな表示をしています。表示の内容 をよく理解してから本文をお読みく

/ 危険

この表示の注意事項を守らないと 火災、感電、破裂などにより死亡が 大けがなどの人身事故が生じます。

♠ 警告

この表示の注意事項を守らないと 火災や人身事故の原因となります。


この表示の注意事項を守らないと けがをしたり周辺の家財に損害を与 えたりすることがあります。









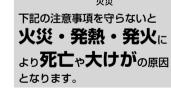

火の中に入れない



分解しない

故障や感電の原因となります。内部の 点検および修理はソニーの相談窓口ま たはお買い上げ店、ソニーサービス窓 口にご依頼ください






お買い上げいただきありがとう ございます。 ▲警告 電気製品は安全のた

めの注意事項を守らないと、 災や人身事故になることがあり この取扱説明書には、事故を防

ぐための重要な注意事項と製品 の取り扱いかたを示していま 。この取扱説明書をよくお読 みのうえ、製品を安全にお使い ください。お読みになったあと は、いつでも見られるところに 必ず保管してください。

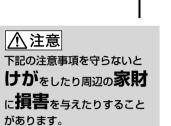

大音量で長時間続けて聞きす ぎない

耳を刺激するような大きな音量で長時 間続けて聞くと、聴力に悪い影響を与 えることがあります。 耳を守るため、音量を上げすぎないよ うにご注意ください





はじめからボリュームを上げ すぎない

突然大きな音が出て耳をいためること があります。接続した機器のボリュー MD、CD や DAT など、雑音の少ない デジタル機器を聞くときにはご注意く



肌に合わないと感じたときは、 使わない

肌に合わないと感じたときは早めに使 用を中止して、医師またはソニーの構



製品カスタマー登録のおすすめ 製品をご購入いただいたお客様のサポートの充実を図るため、カスタ

詳しくはウェブ上の案内をご覧ください。 nttp://www.sony.co.jp/avp-regi/

よくあるお問い合わせ、窓口受付時間などは ホームページをご活用ください。	http://www.	.son	y.co.jp/support
使い方相談窓口 フリーダイヤル・・・・・・・・・・012 携帯電話・PHS・一部のIP電話・・046			左記番号へ接続後、 最初のガイダンスが 流れている間に
<u>修理相談窓■</u> フリーダイヤル・・・・・・・・012 携帯電話・PHS・一部のIP電話・046	20-222-330 66-31-2531	•	「309」+「#」を押してください。

※取扱説明書·リモコン等の購入相談はこちらへお問い合わせください。



<u></u> 注意

禁止

主な特長

● 独自開発、DNC ソフトウェアエンジ

ンを搭載した、デジタルノイズキャン

高精度なキャンセル信号生成により.

約 98.4%*1 の卓越した騒音低減を実

• フルオート AI ノイズキャンセリング

周囲の騒音を常に分析し、最適なノ

デジタルサウンドエンハンサーおよび

フルデジタルアンプ S-Master によ

● 大口径 16mm ダイナミック型ドライ

バーフニット採用により、広帯域再生

• 密閉型バーティカル・イン・ザ・イヤー

く快適で安定した装着性を実現

• 耳の大きさにあわせて選べる、7種

類のハイブリッドイヤピース付属

3つのサウンドモード (NORMAL)

方式採用により、耳への負担が少な

BASS/MOVIE) を搭載。視聴ソース

晋情に合わせてお好みで選択可能

▶ 周囲の音が聴き取れるモニター機能

• 手元で音量を簡単操作できる便利な

*1 当社規定の航空機シミュレートノイズ下

における、ノイズキャンセリングモード A 時と、ヘッドホンの非装着時との比較

による値です。総騒音抑制量 約 18 dB は 音のエネルギーで約 98.4 % の騒音低減に

各部のなまえと働き

相当します。

7

1 マイク部

2 イヤーピース

ができます。

6 電池ぶた

8 液晶画面

③ SOUND MODE ボタン

4 VOLŪMĖ(+/−) ボタン

本機の音量を調節します。

あっぱら/パップー 5 HOLD/POWER スイッチ

7 MONITOR ボタン

サウンドモードを ŃORMÁ

RASS、MOVIF に切り換えること

+ 側に凸点(突起)がついていま

す。操作の目印としてお使いくだ

周囲の音を聞くことができます。

本機の状態を表示します。

10 N C OPTIMIZE ボタン

整することができます。

⑨ 金メッキ L 型ステレオミニプ

ノイズキャンセリングの効果を、調

NC OPTIMIZE

音質での音楽再生が可能

イズキャンセリングモードを自動選択

り、理想的な周波数特性を実現、高

◆本機を使用中に気分が悪くなった場 合は、すぐに本機の使用を中止して

このヘッドホンは、密閉度を高めて いますので、強く押された場合、鼓 膜などを痛める危険があります。他 の人と強く接触したり、ボールなど が飛んでくるような場所では使用し また、ヘッドホンを耳に押しつける 、振動板から音が生じる場合があ

りますが、故障ではありません。 ● イヤーピースはしっかり取り付けて ください。イヤーピースがはずれて 耳に残ると、けがや病気の原因とな

電池につい ての安全上 のご注意

液漏れ・破裂・発熱・ 発火・誤飲による大 けがゃ失明を避けるため、 下記の注意事項を必ずお守りく

ださい。

電池の種類については、電池本体	
上の表示をご確認ください。	
	-

アルカリ単3形 マンガン乾電池のご使用は、持続時間が 極端に短いため、おすすめしません。

| <u>/ (</u> 危険| 乾電池が液漏れしたとき 乾電池の液が漏れたときは素手 で液をさわらない

液が本体内部に残ることがあるため 一の相談窓口またはソニーサー ビス窓口にご相談ください。 液が目に入ったときは、失明の原因 になることがあるので目をこすらず すぐに水道水などのきれいな水で充 分洗い、ただちに医師の治療を受け 夜が身体や衣服についたときも、や

けどやけがの原因になるので、すぐ にきれいな水で洗い流し、皮膚に炎 症やけがの症状があるときには医師

⚠ 警告 乾電池について

- 小さい電池は飲み込む恐れがあるの で、乳幼児の手の届くところに置か よい。万が一飲み込んだ場合は、窒 息や胃などへの障害の原因になるの 、直ちに医師に相談する。
- 機器の表示に合わせて+と-を正し
- 充電しない。

に相談してください。

- ◆火の中に入れない。分解、加熱しない。 金属類と一緒に携帯・保管しない。 液漏れした雷池は使わない。
- 使いきった電池は取りはずす。長時 間使用しないときも取りはずす。

|<u>/</u>| 注意| 乾電池について

- ろ・炎天下の車中など、高温の場所 で使用・保管・放置しない。
- 外装のビニールチューブをはがした り傷つけたりしない
- 指定された種類以外の電池は使用し

11 クリップホール

電池を入れる

1 電池ぶたのロックをはずし、電 池ぶたを開ける。



2 単 3 形乾電池を ⊝ 側から入れ 内部のストッパーが電池を押さえる



乾雷池の+と-を逆に入れると、発熱や 故障の原因になる恐れがあります。乾電 也は正しい向きに入れてください 3 電池ぶたを閉じて、電池ぶたの





松电心心外视时间			
乾電池の種類	持続時間 *1		
ソニー単 3 形アルカリ 乾電池 LR6/AM3	約 20 時間 *2		
* ¹ 1 kHz、0.1 mW + 0.1 * ² 周囲の温度や使用状態 続時間と異なる場合が	により、上記の持		
電池交換の目安			

乾電池が消耗してくると電池残量表示 が変わり、残量がなくなると電源が切れ

電池残量表示を目安に乾電池の交換を

ご注意

長い間乾電池を使用しない場合は取り出して 電池を交換するときは

電池ぶたを開け、内部のストッパーをス ライドさせてから、電池を取りはずして

イヤーピースの正しい 装着方法


イヤーピースが耳にフィットしていない と、適切なノイズキャンセリング効果が 得られない場合があります。 快適なノ イズキャンセリング効果と、より良い音 質を楽しんでいただくためには、イヤー ピースのサイズを交換したり、おさまり の良い位置に調整するなど、ぴったり耳 お買い上げ時には、M サイズが装着さ れています。サイズが耳に合わないと 感じたときは、付屋のイヤーピースの 中から、最適なものを選んで交換して イヤーピース内側の色で確認してくだ

イヤーピースがはずれて耳に残らない よう、イヤーピースを交換する際には、 ヘッドホンにしっかり取り付けてくださ

イヤーピースのサイズ (内側の色)

	小さい 🖊	一径一	► 大きい
高い	-	ML	LL
- 1		(青)	(紫)
■ 高さ	S	М	L
	(橙)	(緑)	(水色)
4	SS	MS	-
低い	(赤)	(黄)	

断面図

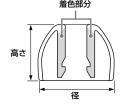


イヤーピースをはずすときは

ヘッドホンを片手で押さえ、もう一方の の種類 手でイヤーピースを軸ごとねじりながら




掌 ヒント - - · -ピースが滑りやすくはずしにくいとき は、乾いた柔らかい布でくるむとはずしやす

イヤーピースの着色部分の先端が、ヘッ ドホンの突起部分にある (A) の位置にく

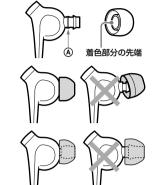

音楽を聞く

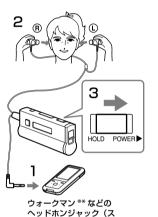

テレオミニジャック)

2 ヘッドホンをつける。 ®の町のついた方を右耳に、◎(左 右識別用の突起があります。)の印

イヤーピースは耳の穴を密閉するよ うに、差し込んでください。

ないと、ノイズキャンセリング効果が得られませんので、イヤーピースはおさま の良い位置に調整をして、ぴったりと 耳に装着させるようにしてください。

3 HOLD/POWER スイッチを POWER 側へスライドさせる。 液晶画面に **DIGITAL-NC** と表示

4 接続した AV 機器を再生する。

-ジが表示されます。 お好みの音量に調節してください。

- 接続した機器の音量調節はできませ
- VOLUME を最小にしても再生音は完 全には消えません。

フルオート AI ノイズキャン セリングについて

フルオート AI ノイズキャンセリングはノ 択する便利な機能です。本機の電源が 入ると周囲の環境音を常に解析し、環 **境音の変化に追従しながらその場に最** も効果的なノイズキャンセリングモード へ自動的に移行します。


ノイズキャンセリングモード

画面表示





イヤーピースをつけるときは

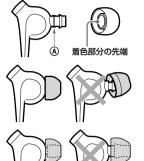

1 聞きたい AV 機器を接続する。

のついた方を左耳に付けてくださ

ご注意

音が聞こえます。

5 音量を調節する。 VOLUMF(+/-)ボタンを押すと

- "ウォークマン"、"WALKMAN"、 "WALKMAN"ロゴは、ソニー株式会社の

出荷時の状態に戻す





グモードが表示されます。 NC モード A (NC A): 中低域の音を多く含む騒音に適して

います。 主に航空機内の騒音に効果的です。 NC T− F B (NC B)

超低域の音を多く含む騒音に適して います。 主にバス·雷車の騒音に効果的です。 NCモードC(NCC):

比較的静かで広い帯域の騒音に適 しています。 主にオフィス・OA 機器などの騒音 に効果的です。

貸 ヒント 騒音の性質は、時を追って変化していきます 本機は、その場の騒音に最適なノイズキャン

2 みぞに差し込んで固定する。 サウンドモードを選ぶ ご注意

画面表示

MOVIE NC A

現在設定されているサウンドモードが表 示されます。 **1** SOUND MODE ボタンを押す。

サウンドモードが NORMAL BASS → MOVIE の順で切り換わり NORMAL:(画面表示なし

高音質なヘッドホン再生をお楽しみ いただけます。 BASS:

重低音の効いた迫力のあるサウンド をお楽しみいただけます。 MOVIE:

ヴ ヒント MOVIE では、本機のボリュームが 16 付近のときに最も効果を得られるよう調

騒音下で、ダイナミックレンジの大

きな AV ソースを視聴するのに最適

整されています。 ノイズキャンセリング量を 調整する ーノイズキャンセリング調整

機能一 本機は、ノイズキャンセリングの効果が 最も得られるようにあらかじめ設定され ていますが、耳の形状や使用環境によっ 効果を得にくい場合があります。 ノイズキャンセリングの効果が得にくし と感じるときは、ノイズキャンセリング

調整機能を使って調整してください。 **1** NC OPTIMIZE ボタンを押す。 液晶画面にゲージが表示され、再 生中の音声は消音されます。

2 VOLUME(+/-) ボタンを押し て、調整する。

21段階の値で調節できます。

で自分で最もノイズキャンセリング 効果が得られると感じられる位置に **3** 調整が終わったら

NC OPTIMIZE ボタンを押す。 **ヴヒント**

ノイズキャンセリング調整機能で行った調整値は、3つのノイズキャンセリングモー ドすべてに反映されます。 ノイズキャンセリング調整機能で設定した 値は電源をOFFにしても記憶されています

調整値の大小がノイズキャンセリング効果の

大小を表しているわけではではありません

周囲の音を注意して聞きたい ときは

MONITOR ボタンを押すと、再生音が 聞こえなくなり、外部の音を聞くことが できます。 MONITOR を終了するときは、もう一 度 MONITOR ボタンを押してください。

誤操作を防ぐ

を防ぐことができます。

してください。

HOLD を解除するときは HOLD/

POWER スイッチを POWER 側に動か

ーホールド機能ー れている場合や、機内の音楽サーヒ スを個人のヘッドホンで利用すること HOLD/POWER スイッチを HOLD 側 が禁止されている場合は、本機を使 に動かすと、画面に「HOLD」が点灯し 用しないでください。 すべてのボタン操作ができなくなりま 本機を使用しないときはヘッドホンを す。不用意に電源が入るなどの誤操作

お使いになったあとは 本機に記憶されている設定値などを出

荷時の状態に戻すことができます。

電源を入れる。

離す。

かた

1 電源が切れている状態で、NC

2 画面に「ALL RESET」と表示さ

コード長アジャスターの使い

図のようにコードを巻きつけて長さを調

(巻きつける長さは 40 cm までを日安

けるとコードがはずれやすくなります。)

プラグやコード分岐部分を巻きつけないよう にしてください。負担がかかりやすく断線に

付屋のクリップを木休に取り付けること

で、服やかばんに本体を固定すること

クリップを本体に取り付ける

1 本体の背面にある穴へクリップ

っ プはどちらの向きでも取り付ける

2 クリップの内側にあるレバーを

本体にクリップが固定されます。

クリップを本体からはずす

1 クリップの内側にあるレバーを

クリップのロックがはずれます。

2 クリップのレバー側を約2 mm、

3 クリップを矢印の方向へ引き抜

航空機内で使用するときのご

• 付属のプラグアダプターは、航空機

のデュアルジャックまたはステレオミ

ニジャックに接続することができま

デュアルジャック ステレオミニジャック

航空機内で電子機器の使用が禁止される

耳からはずしてください。

上に軽く持ち上げる。

の凸部を片方ずつ入れる。

1 コードを巻きつける。

つながる恐れがあります。

ができます。

賞 ヒント

ことができます。

外側へ引く。

内側へ押す。

クリップの使いかた

れたら NC OPTIMIZE ボタンを

OPTIMIZE ボタンを押しながら

本機の POWER スイッチを「OFF」に してください。

貸 ヒント

ご注意

いかた

の設定になります。

所や直射日光のあたる場所には置か 1 約1秒以上 HOLD/POWER ス ないでください。故障の原因となり イッチを POWER 側へスライド させた状態にする。

木機は 雷源をオフにしたときの各種設定を

記憶します。再び電源を入れたときは、前回

動作時に電池を抜くと、設定は記憶されませ

キャリングケースの使

本機をキャリングケースに収納するとき

は、コードを束ねてから収納してくださ

- 常に良い音でお聞きいただくために、 プラグを時々柔らかい布でからぶき 画面に「See You!」と表示され、 」、 清潔に保ってください。 電源が切れます。
 - 汚れは、乾いた柔らかい布でふき取っ てください。特にプラグ部分を汚れ たままにしておくと、音質が悪くなっ たり、音がとぎれたりすることがあり ます。

取り扱い上のご注意

• 落としたりぶつけたりなどの強い

ショックを与えないでください。

• 湿気やほこり、油煙、湯気の多い場

- イヤーピースのお手入れは、ヘッドホ ンからイヤーピースをはずし、うすめ た中性洗剤で手洗いしてください。 洗浄後は、水気をよくふいてからご 使用ください。 ● イヤーピースは長期の使用・保存に
- より劣化する恐れがあります。

静電気に関するご注意

空気が乾燥する時期に耳にピリピリと痛 ニーサービス窓口にご相談ください。 みを感じることがありますが、ヘッドホ ンの故障ではなく人体に蓄積される静 雷気によるものです。静雷気の発生し にくい天然素材の衣服を身に着けてい ただくことにより軽減されます。

イヤーピースは消耗品です。イヤー ピースが破損し交換する場合は、お 近くのソニー製品取扱店でお求めく

万一故障した場合は、内部を開けず ソニーの相談窓口またはお買い 上げ店にご相談ください。

万一異常や不具合が起きたときは お買い上げ店またはソニーサービス 窓口にお問い合わせください。

故障とお考えになる前

音が出ない。

- → 本機の電源を入れる → 本機の乾電池の残量を確認する。 → 本機と AV 機器との接続を確認する。
- → 接続した AV 機器の音量を上げる。 音がひずむ。 ➡ 接続した AV 機器の音量を下げる。

いるか確認する。

→ 新しい乾電池と交換する

電源が入らない。 → 新しい乾電池と交換する。

操作できない。 → 本機の電源を切ってから電池を取りはず

し、再び電池を入れ、電源を入れる。 使用上のご注意

本機は、ノイズキャンセリング機能を搭 載したヘッドホンです。 ノイズキャンセリング機能とは

室内の空調音など)と逆位相の音を出 すことで環境ノイズが低減して聞こえる 静かな場所やノイズの種類によって

外部の環境ノイズ(乗り物内の騒音や

と感じられる場合があります ヘッドホンのマイク部を手などで覆わ グ効果が得られなくなる場合がありま

は、ノイズキャンセリング効果が感じられない、またはノイズが大きくなる

• ヘッドホンのつけかたによっては、ノ

- イズキャンセリング効果が減少するこ とがあります。 ノイズキャンセリング機能は、乗り物 や空調などの主に低い周波数帯域の 騒音に対してもっとも効果を発揮しま す。すべての音が打ち消されるわけ
- ではありません。 自動車、バスなどでご使用の場合 路面状況によっては、ノイズが発生 することがあります。 携帯電話の影響によりノイズが入るこ

とがあります。この場合は、携帯電

話から本機を離してください。

(製品の機能を維持するために必要な部

主な仕様 一般仕様 密閉ダイナミック型

ニアイノ ミックミ バーチカル・イン イヤー方式 ドライバーユニット: 16 mm、ドーム型(CCAW 採用) 最大入力

装着方式:

インピーダンス: 16 Ω (1 kHz にて) → 本機に接続した AV 機器の電源が入って

 感度:
 103 dB/mW

 再生周波数帯域:
 6 ~ 24,000 Hz

 総騒音抑制量 (TNSR)*2

> プラグ 金メッキステレオミニブ 電源: (単 3 形乾電池× 1) 質量 : ヘッドホン部:

約8g(コード含まず) コントロールボックス部 約53g(コード含まず、 電池含む)

延長コード(金メッキステレオミニプラグ ・/ -ド長アジャスター(1)

航空機用プラグアダプター(1)*

キャリングケース (1) キャリングポーチ (1) イヤーピース (SS/S/MS/M/ML/L/LL 各 2) 単3形アルカリ乾電池(1) 取扱説明書(1)プロダクトインフォメーション(1)

保証書(1)

*1 当社規定の航空機シミュレートノイズ下 における、ノイズキャンセリングモード A時と、ヘッドホンの非装着時との比較 音のエネルギーで約 98.4 % の騒音低減に 相当します。
² 当社測定法による。モード毎の総騒音抑

制量については別冊のプロダクトイン

フォメーションをご覧ください。 機内の音楽サービスによっては、対応ができない場合があります。

本機の仕様および外観は、改良のため予告なく変更することがありますが、ご了承くださ

- この製品には保証書が添付されてい ますので、お買い上げの際お受け取 所定事項の記入および記載内容をお
- 確かめのうえ、大切に保存してくだる
- 保証期間は、お買い上げ日より1年

アフターサービス

調子が悪いときはまずチェックを この説明書をもう一度ご覧になってお調

それでも具合の悪いときは お買い 上げ店または添付の「ソニーご 相談窓口のご案内」にあるお近くのソ

保証期間中の修理は


保証書の記載内容に基づいて修理させ ていただきます。詳しくは保証書をご覧


保証期間経過後の修理は 修理によって機能が維持できる場合は


ご要望により有料修理させていただき 部品の保有期間について 当社ではヘッドホンの補修用性能部品

品)を、製造打ち切り後 6 年間保有し ています。この部品保有期間を修理可能期間とさせていただきます。保有期 間が経過したあとも、故障箇所によって は修理可能の場合がありますので、お 買い上げ店またはサービス窓口にご相

保証書とアフターサー

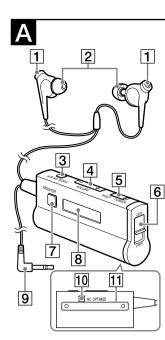


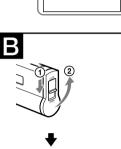


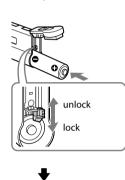






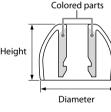

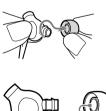

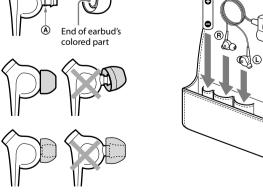



WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus

To reduce the risk of electrical shock, do not open the cabine

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Owner's Record
The model number is located at the back side of the control box. control box.

provided below. Refer to them Model No. MDR-NC300D






When connecting to the stereo mini jack of the remote control supplied with a WALKMAN®, etc.

"WALKMAN" and "WALKMAN"

D


囯

G

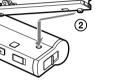





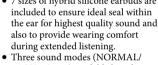

- BASS/MOVIE) available based on use or application.

 • Built-in monitor function lets you
- silence the audio to listen outside

Function of Parts (see fig. A)

- 2 Earbuds
- NORMAL, BASS and MOVIE.
- 4 VOLUME(+/-) button The VOLUME + button has a tactile dot for ease of use.
- 5 HOLD/POWER switch
- 7 MONITOR button
- 8 LCD display mode, etc.
- 9 Gold-plated L-type stereo
- 10 NC OPTIMIZE button sensitivity level.
- 11 Clip holes To attach the supplied clip

The serial number is located in the Record these numbers in the spaces whenever you call upon your Sony

Features

- Digital noise canceling headphones with Sony's unique DNC Software Creation of a high-precision canceling signal delivers outstanding
- Automatic AI (Artificial function. Automatic selection of the optimal

noise canceling mode based on

- intelligent analysis of environmental Digital Sound Enhancer and full digital S-Master amplifier delive ideal frequency response and high
- Large 16 mm dynamic type driver units deliver a wide frequency range
- and broad dynamic range. Closed type vertical in-the-ear headphones for secure fit and wearing comfort.
- 7 sizes of hybrid silicone earbuds are

- Easy-to-use volume control on control box.

Location and

- 1 Microphones
- 3 SOUND MODE button

- 6 Battery compartment lid
- To hear ambient sound for safety

Installing a battery (see fig. **B**)

- 1 Unlock and open the battery compartment lid.
- 2 Insert an AA/LR6 dry battery, \subseteq end first. Insert the battery until the internal stopper holds the battery.
- Make sure to insert the battery ⊖ end first. If you fail to do so, it may cause heat buildup or a fault.
- 3 Close and lock the battery compartment lid.

Battery life

Battery	Approx. hours*1
Sony alkaline AA/LR6 dry battery	20 hours*2

- *1 At 1 kHz, 0.1 mW + 0.1 mW output
- *2 Time stated above may vary, depending on the temperature or conditions of use. When to replace the

batterv

When the battery becomes low, the oattery remains status on the LCD display will change. The unit will turr off automatically if there is no battery Replace the dry battery by checking the



Take out the battery from the unit if you do not intend to use the unit for a long time.

How to replace the battery

Open the battery compartment lid, unlock the internal stopper, and then take out the battery.

How to install the earbuds correctly (see fig. C)

If the earbuds do not fit your ears correctly, the noise canceling effect will not be optimal. To optimize noise canceling and to enjoy better sound quality, change the earbuds to anothe size, or adjust the earbud position to fit your ears comfortably and snugly. If the earbuds do not fit your ears, try another size. Confirm the size of the earbuds by checking color inside (see

When you change the earbuds, turn to install them firmly on the headphone to prevent the earbud from detaching

Earbud sizes (inside color)

	Small Diameter			
High	-	ML (Blue)	LL (Purple)	
Height	S (Orange)	M (Green)	L (Light bl	
Low	SS (Red)	MS (Yellow)	_	

To detach an earbud (see fig. **C**-②)

While holding the headphone, twist and pull the earbud off.

If the earbud slips and cannot be detached, wrap it in a soft dry cloth.

To attach an earbud (see fig. **C**-③)

Push the earbud onto the headphone to where the end of the earbud's colored part aligns with **(A)**.

To optimize the noise Listening to music canceling effect (see fig. **D**) -Noise canceling

1 Connect the headphones to the listening equipment.

to POWER side.

4 Turn on the power of the

5 Adjust the volume.

display, and a short beep sounds

A scale bar appears on the LCD

display when you press VOLUME +

The scale bar changes according to

Notes
• VOLUME + or – of this headphones does

AV equipment.

• Even if you adjust the volume to the

Automatic Al Noise

Automatic AI Noise Canceling is a

iseful function that automaticall

selects one of the noise canceling

modes. This function provides the mos

NC A

This mode is suitable mainly for low

and midrange frequency noise.
This mode is suitable mainly for

This mode is suitable mainly for

ultralow frequency noise. This mode is suitable mainly for

This mode is suitable mainly for

This mode is suitable mainly for

noise in an office environment (PC

subtle and wideband noise.

copier, air ventilation, etc.).

Noise characteristics vary over time. The headphones automatically select the appropriate noise canceling mode for the

To select a sound mode

MOVIE NC A

The current sound mode is displayed 1 Press the SOUND MODE button.

The sound mode changes in the

This mode provides high level of

sound reproduction with booming

This mode is suitable for enjoying

an AV sound source with wide

dynamic range in a noisy place.

"Tip The MOVIE mode is the most effective when volume level of this

unit is set to around 16.

order of NORMAL → BASS →

The current noise canceling mode is

effective automatic noise canceling by

constant analyzing of ambient sound

Noise canceling modes

Canceling

LCD display

NC mode A (NC A):

NC mode B (NC B):

NC mode C (NC C):

̈̈́ Τip

LCD display

MOVIE.

NORMAL: (nothing displayed)

reproduction.

bass sound.

MOVIE:

noise in an airplane.

noise in a bus or train.

minimum, some sound leakage in the headphones may be heard.

- 2 Put on the headphones Wear the earpiece marked (R) in our right ear and the one marked (L) (L) has a tactile dot for ease of use.) in your left ear.
- Adjust the earbuds position to fit your ears snugly. If you wear the headphones correctly, noise canceling will not function.
- 1 Press the NC OPTIMIZE button A scale bar appears on the LCD display and playback sound is Adjust the earbud position to sit on your ears comfortably and fit your 2 Press the VOLUME(+/-) button 3 Slide the HOLD/POWER switch repeatedly to adjust.
 21 levels of sensitivity are available
- **DIGITALNC** appears on the LCD osition of the mark where you feel the noise canceling effect is the 3 Press the NC OPTIMIZE button

to finish setting.

optimization function

This unit is designed for creating the

most effective noise canceling effects, but the default setting may not be bes

because of differences in ear shape or

usage circumstances.
Optimize the noise canceling effect

function if the default effect is not

using the noise canceling opt

sufficient.

- The setting value of the noise apply to all 3 noise canceling modes
- The setting value of the noise canceling optimizing function is emorized, even when the power is

The value of this setting does not reflect the impact of the noise canceling effect.

To hear environmental sound for safety

Press the MONITOR button while the power is on, playback silences, and you can hear the surrounding enviro o finish this function, press the MONITOR button again

To prevent false operation -Hold function-

When you slide the HOLD/POWER switch to HOLD side, "HOLD" appears in the display and the controls on the unit are disabled. This function is useful to prevent false operation such as turning on the unit unintended. To cancel the Hold function, slide the HOLD/POWER switch to POWER

To reset the headphones to the factory default

You can reset the setting value of the eadphones to the factory default.

- 1 While the power is off, turn on the power of the headphones with pressing and holding the NC OPTIMIZE button. 2 Release the NC OPTIMIZE button
- when "ALL RESET" appears on the LCD display How to use the supplied

cord adjuster (see fig. 🖪) You can adjust the cord length by

winding the cord on the cord adjuste (The cord can be wound to the cord adjuster up to 40 cm. If you wind more the cord comes off from the cord adjuster easily.) 1 Wind the cord.

- 2 Push the cord into slot hole to secure in place.
- Do not wind the plug or split section of the cord, as it will strain the cord and may cause a wire break.

How to use the clip

You can fasten the unit on your clothe or bag, by attaching the supplied clip To attach the clip (see fig. 🖪)

1 Insert the knobs of the clip into the holes on the rear of the unit as shown in the illustration 🍟 Tip

You can attach the clip either way

2 Slide the clip's inner lever The clip is locked in place.

To detach the clip (see fig. **G**) 1 Slide the clip's inner leve

The clip is released.

side) approx. 2 mm

Notes on using on an

the arrow.

dual jacks

After use

airplane

2 Lift the end of the clip (lever

3 Pull the clip in the direction of

• The supplied plug adaptor can be

connected to the dual or stereo mini jacks of in-flight music services.

• Do not use the headphones when use

of electronic equipment is prohibited

or when use of personal headphones

Turn off the power of the headphones

to POWER side, and then hold

See You!" appears in the display,

1 Slide the HOLD/POWER switch

about 1 seconds or more.

When power is turned off, the unit

stores the settings, which are applied again when the unit is turned on.

battery during the operation.

How to use the

Bundle the cord beforehand when storing the headphones into the

Troubleshooting

Check that the battery is not

• Check the connection of the

• Check that the connected AV

• Turn down the volume of the

Power does not turn on

equipment is turned on.

Muffled sound

properly.

headphones and the AV equipment

• Turn up the volume of the connected

connected AV equipment.

Replace the battery with a new one

Replace the battery with a new one.

The unit does not operate

• Turn off the unit and then take out

turn on the unit again.

the battery. Reinsert the battery and

Turn on the headphones

carrying case

(see fig. 🚻)

No sound

depleted.

Settings are not stored if you replace the

and then unit turns off.

stereo mini jacks

vertical in-the-ear 16 mm, dome type (CCAW adopted)

16 Ω (at 1 kHz) 103 dB/mW

Total Noise Suppr ession Ratio* Approx. 18 dB*

Gold-plated stereo Plug:

mini-plug DC 1.5 V, 1 × AA/LR6 dry

Approx. 53 g (without

or in-flight music services is Take the headphones off when not in

Extension cord (1 m, gold-plated stereo mini-plug) (1) Cord adjuster (1) Plug adaptor for in-flight use*3 (single/dual) (1) Carrying pouch (

L \times 2, LL \times 2) Sony alkaline AA/LR6 dry battery (1) Operating Instructions (1) Product Information (1)

- *1 Equivalent to approx. 98.4 % reduction of energy of sound compared with not wearing headphones (NC MODE A).
- Suppression Ratio amount for each mode, refer to the Product Information booklet.

Design and specifications are subject to

canceling circuit.

The noise canceling circuit actually

- senses outside noise with built-in microphones and sends an equal-but-opposite canceling signal to the headphones.
- nvironment, or some noise may be Do not cover the microphones of the

• The noise canceling effect may not be

- noise canceling function may not work properly.

 • The noise canceling effect may vary
- The noise canceling function work for noise in the low frequency band primarily. Although noise is reduced
- When you use the headphones in a train or a car, noise may occur lepending on street conditions
- Mobile phones may cause interference and noise. Should this occur, locate the headphones further away from the mobile phone.

Specifications

Power handling capacity

Sensitivity: 6 – 24,000 Hz

1.2 m (47 1/4 in) OFC litz

Approx. 8 g (without cord Control box section:

Earbuds (SS \times 2, S \times 2, MS \times 2, M \times 2, ML \times 2,

- *2 Under the Sony measurement standard. For details about the Total Noise

³ May not be compatible with some in-flight

Precautions

change without notice.

The headphones contain a noise

What is noise canceling?

- pronounced in a very quiet headphones with your hands. The
- depending on how you wear the
- it is not canceled completely.

Notes on usage • Clean the headphones with a soft dry

- Do not leave the jack plug dirty
- otherwise the sound may be distorted
- Be sure to bring the headphones to the Sonv dealer when requiring a
- Do not leave the headphones in a ocation subject to direct sunligh heat or moisture.
- Do not subject the headphones to excessive shock. • To clean the earbuds, first remove
- them from the headphones, and ther clean them with water and mild detergent. After cleaning, dry each earbud carefully before use • The earbuds will need to be replaced
- from time to time. If they are worn out by daily use or longtime storage, place them with new ones.
- If you fell drowsy or sick while using these headphones, stop use
- Install the earbuds firmly onto the headphones. If an earbud accidentally detaches and is left in your ear, it may

Notes on headphones Preventing hearing damage

Avoid using headphones at high volume. Hearing experts advise again you experience a ringing in your ears

educe the volume or discontinue Do not use headphones while driving and cycling, etc.

they may cause a traffic accident. Also avoid listening with your headphones in situations where hearing must not be impaired, for example, a railroad Note on static electricity

In particularly dry air conditions, mild

tingling may be felt on your ears. This is a result of static electricity accumulated

in the body, and not a malfunction of

the headphones.
The effect can be minimized by wearing clothes made from natural materials

If you have any questions or problems concerning the system that are not covered in this manual. please consult your nearest Sony dealer.

General